

ANIMATED SKULL SNAKE™

⚠ WARNING! CHOKING HAZARD - small parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. Carefully remove and discard pull tab from the battery compartment located on bottom of ANIMATED SKULL SNAKE™. Retailer may have already removed this pull tab to allow for "Try Me" demo.
2. Carefully remove and discard the "Try Me" wire and packaging.
3. Replace demo batteries with 3 brand new AA alkaline batteries into the battery compartment located on bottom of ANIMATED SKULL SNAKE™.
4. Turn switch to the "ON" position.
5. Make a loud sound (clap) or wave hand in front of item to activate scary sequence!

NOTE: Keep switch in the "OFF" position when not in use.

SURFACE WASHABLE ONLY. All new materials: plastic.


Item #60021. ANIMATED SKULL SNAKE™ is a trademark of Tekky.

Copyright © 2021 Tekky. All rights reserved. MADE IN CHINA.

TekkyDesign.com

BATTERY INSTRUCTIONS & CAUTIONS

REQUIRES 3
AA BATTERIES
(included for demo
purposes only).

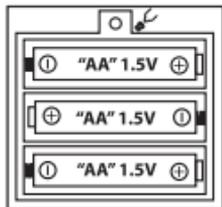

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.