


**Please follow the step by step guide and enjoy Bridgertomb Lady™ !**



## PARTS

1. METAL BASE
2. LOWER LEG POLES
3. UPPER LEG POLES
4. WAIST FRAME WITH CONTROL BOX
5. DRESS
6. UPPER BODY FRAME
7. HEAD
8. PEARL NECKLACE
9. LEFT ARM
10. RIGHT ARM WITH OPERA GLASSES
11. 5.9V 1.5A DC ADAPTER

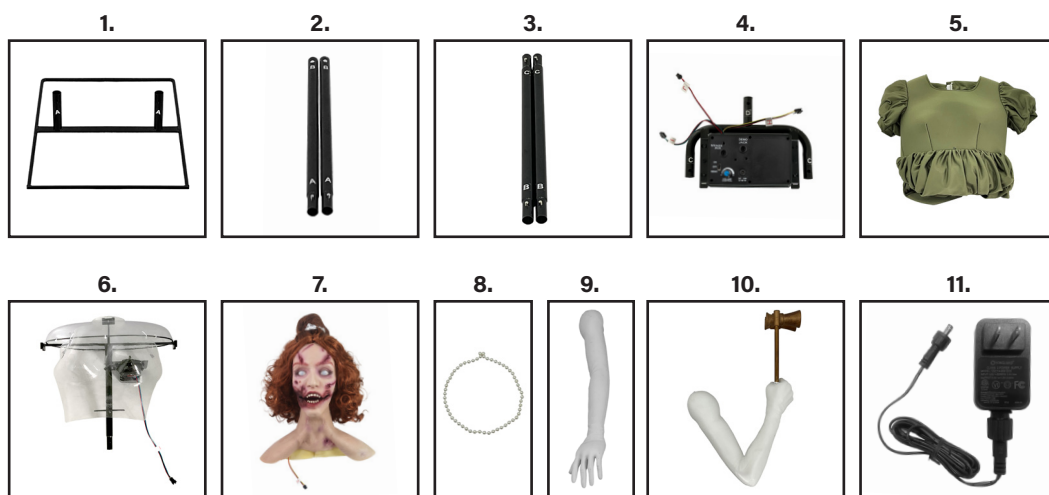

## CARE AND STORAGE INSTRUCTIONS

When the product is not in use, store in its original packing after it is completely dry.  
Keep away from heat.

Please read all instructions carefully before assembling.  
Save this instruction sheet for future reference.

## WARNING

This item is not a toy and should be used for decoration only.  
This item contains small parts that can be a choking hazard.  
Keep all plastic and wire parts away from children. Recommended for ages 15 and up.


1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching letters.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.
5. This item contains Polyvinyl Chloride (PVC).
6. Colors, style and contents may vary slightly from those shown on the package.

Requires 5.9V 1.5A DC adapter (included).  
ALL NEW MATERIALS:  
PLASTIC, FABRIC, METAL, FOAM.  
Surface washable only.

### SMART PHONE SCAN SETUP VIDEO




# ASSEMBLY

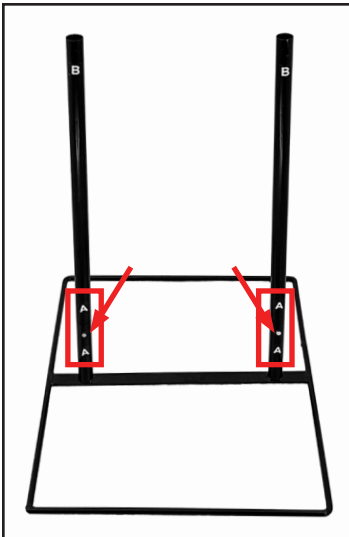

1. Insert and snap lock the lower leg poles into the metal base.

MATCH A to A (x2)

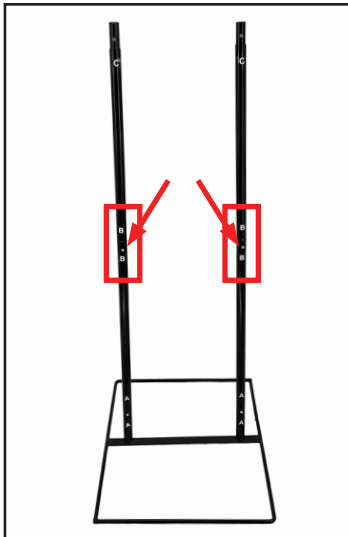

2. Insert and snap lock the upper leg poles into the lower leg poles.

MATCH B to B (x2)



3. Insert and snap lock the waist frame with control box into the upper leg poles.

MATCH C to C (x2)




4. With the hook-and-loop located on the back of the dress unfastened, slide the bottom of the dress over the assembled frame as shown in the above diagram.



5. Insert and snap lock the upper body frame into the waist frame.


MATCH D to D

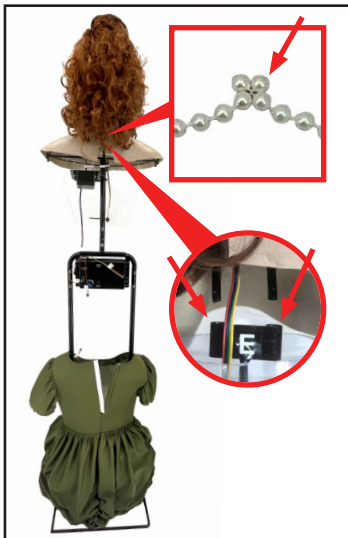

6. Secure the pearl necklace around the neck of the head by twisting the two pearl ends together tightly.

Slide the two metal posts located on the underside of the head into the upper body frame.

MATCH E to E

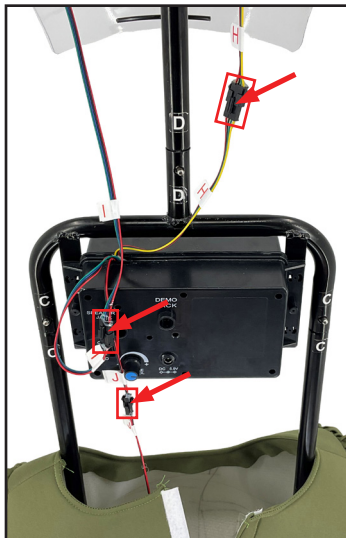

7. Connect the wires located on the head, dress and upper body frame to the control box.

MATCH H to H (Eye LEDs)

MATCH I to I (Head Motion)

MATCH J to J (Motion Sensor)



8. Adjust the upper half of the dress over the shoulders of the upper body frame. Fasten shut the hook-and-loops located on the back of the dress.

## ASSEMBLY



9. Slide the left arms two metal posts into the left shoulder of the upper body frame.

**MATCH F to F**

Adjust the dress sleeve over the left arm shoulder.


10. Slide the right arm with opera glasses into the right shoulder of the upper body frame.

**MATCH G to G**


Adjust the dress sleeve over the right arm shoulder.

Adjust the bottom of the dress over the metal base.

## OPERATING INSTRUCTIONS

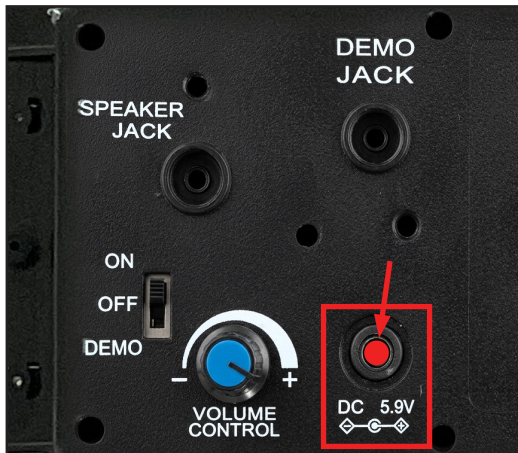

1. Insert the 5.9V 1.5A DC adapter (included) into the control box.

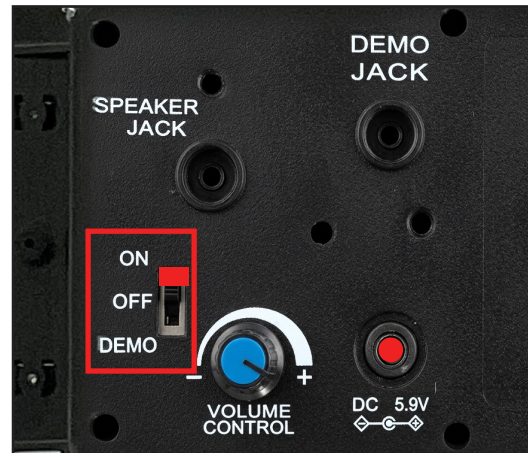

2. Set the control box switch to the ON position. Move in front of the item, or make a sound (clap) to activate the item.

Place the switch to the OFF position when not in use.


## OPTIONAL DEMO / EXTERNAL SPEAKER SET UP INSTRUCTIONS

### OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled **DEMO JACK** on the control box.
2. Place the control box switch into the **DEMO** position to enable footpad activation.
3. Step on the footpad to activate the scary sequence!


\* Footpads are sold separately and can be purchased at [www.tekkycreations.com](http://www.tekkycreations.com)

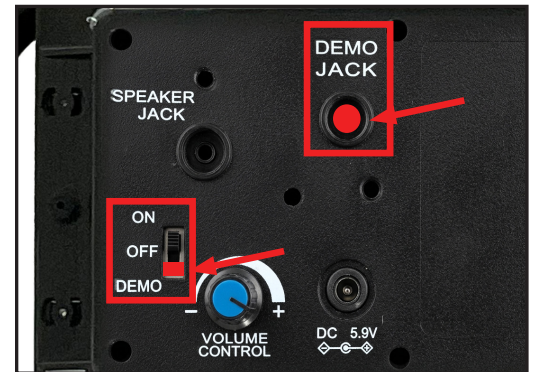

### OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug the speaker cord into the jack labeled **SPEAKER JACK** located on the control box.
2. Turn the **VOLUME CONTROL** knob on the control box to the highest level. Then, using the external speaker's volume control panel, adjust the volume to the desired level.

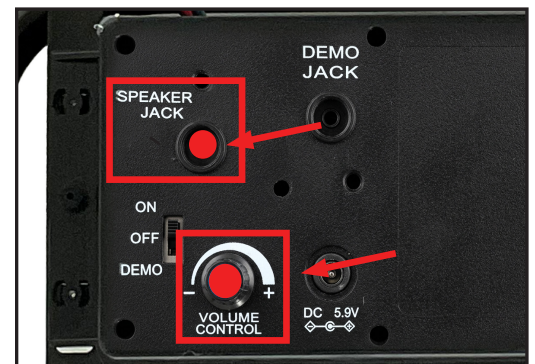



## Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 15.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

**Storage tips:** We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.