

# BURNT FLAMING PUMPKIN™

Please read instructions carefully before use.  
Retain for future reference.

## OPERATING INSTRUCTIONS:

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard "TRY ME" wire and packaging. Retain the hang tag/instructions for future reference.
2. Use a small #2 Phillips/crosshead screwdriver (not included) to open the battery compartment located on bottom of item.
3. Place 3 brand new "AA" alkaline batteries into the battery compartment and replace battery compartment cover. Or, to power with adapter (not included), remove demo batteries, replace the battery compartment cover, and insert 4.5V 1.5A DC adapter into the jack labeled "4.5V 1.5A DC ADAPTER" located on back of pumpkin.
4. Turn the power switch, located on bottom of the PUMPKIN, to the "ON" position to operate the item in TIMER mode. The flame/LED stays on for 6 hours. Make a loud sound (clap) or move in front of the PUMPKIN to trigger audio. After 6 hours, PUMPKIN shuts off for 18 hours and automatically repeats the 6-on/18-off cycle daily.
5. For flame/LED-only operation (no trigger or audio) turn the power switch to the "LIGHTS ONLY" position.

**NOTE:** Keep switch in the "OFF" position when not in use.

**Includes:** (1) BURNT FLAMING PUMPKIN™ decoration.  
INDOOR USE. Display on level surface.  
Surface washable only. Keep away from open flame.

## ⚠ WARNING! CHOKING HAZARD — small parts.

This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older.  
Not intended for use by children 14 years of age and younger.


## BATTERY INSTRUCTIONS:

- Contains 3 AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.

**3AA**

## BATTERIES REQUIRED

Batteries included for "try me" demo purposes only.

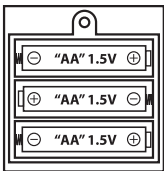

- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.

**⚠ WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## FCC INSTRUCTION

**WARNING:** Adjustment to this unit or replacement of any transmitter component (crystal, semi-conductor, etc.) to this unit that could result in a violation of the rules.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Item #96942.

BURNT FLAMING PUMPKIN™ is a trademark of TEKKY®.  
COPYRIGHT © 2026 Tekky. All rights reserved.