

ROCKS BACK & FORTH
SOUND & MOTION
ACTIVATED



ROCKIN'
NIGHT-MARE™

HALLOWEEN
SCARY
SOUNDS

2AA Batteries
Required
(included for
demo purposes only)

TRY ME!

Rock-a-bye...forever.
Rocks back and forth
Whispers an eerie lullaby

SOUND AND MOTION ACTIVATED
OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS
AWAY FROM CHILDREN

1. Carefully remove and discard the "TRY ME" wire and packaging. Retain the hang tag/instructions for your future reference.
2. Use a small #2 Phillips/crosshead screwdriver (not included) to open the battery compartment located on bottom of item.
3. Place 2 brand new "AA" alkaline batteries into the battery compartment and replace battery compartment cover.
4. Place the power switch, located on bottom of item, to the "ON" position to operate the item in SOUND AND MOTION activation mode. Make a loud sound (clap) or wave your hand in front of ROCKIN' NIGHT-MARE™ to activate the scary sequence!

NOTE: Keep switch in the "OFF" position when not in use.

FOR INDOOR USE.
SURFACE
WASHABLE ONLY.
All new materials:
polyester fibres, plastic, wire.

TekkyDesign.com



WARNING!
Cancer and Reproductive Harm-
www.P65Warnings.ca.gov



ROCKIN'
NIGHT-MARE™

Item # 96948. **ROCKIN' NIGHT-MARE™** is a trademark of Tekky®.
Copyright © 2026 Tekky. All Rights Reserved.


Key 710



Manufactured for: Tekky, Orland Park, IL 60467 USA
MADE IN CHINA

BATTERY INSTRUCTIONS
AND CAUTIONS

 - Includes 2 "AA" batteries for in-store demonstration purposes only. Batteries should be replaced for home use.
- Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.



WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children 14 years of age and younger.