



OVER 6 FEET TALL! * SOUND & MOTION ACTIVATED HALLOWEEN PROP
REALISTIC FLAME EFFECT • EERIE LED LIGHTS AND SPOOKY SOUNDS

SETTING UP YOUR FLAMING DRAGON LAMP POST™


PARTS (4)

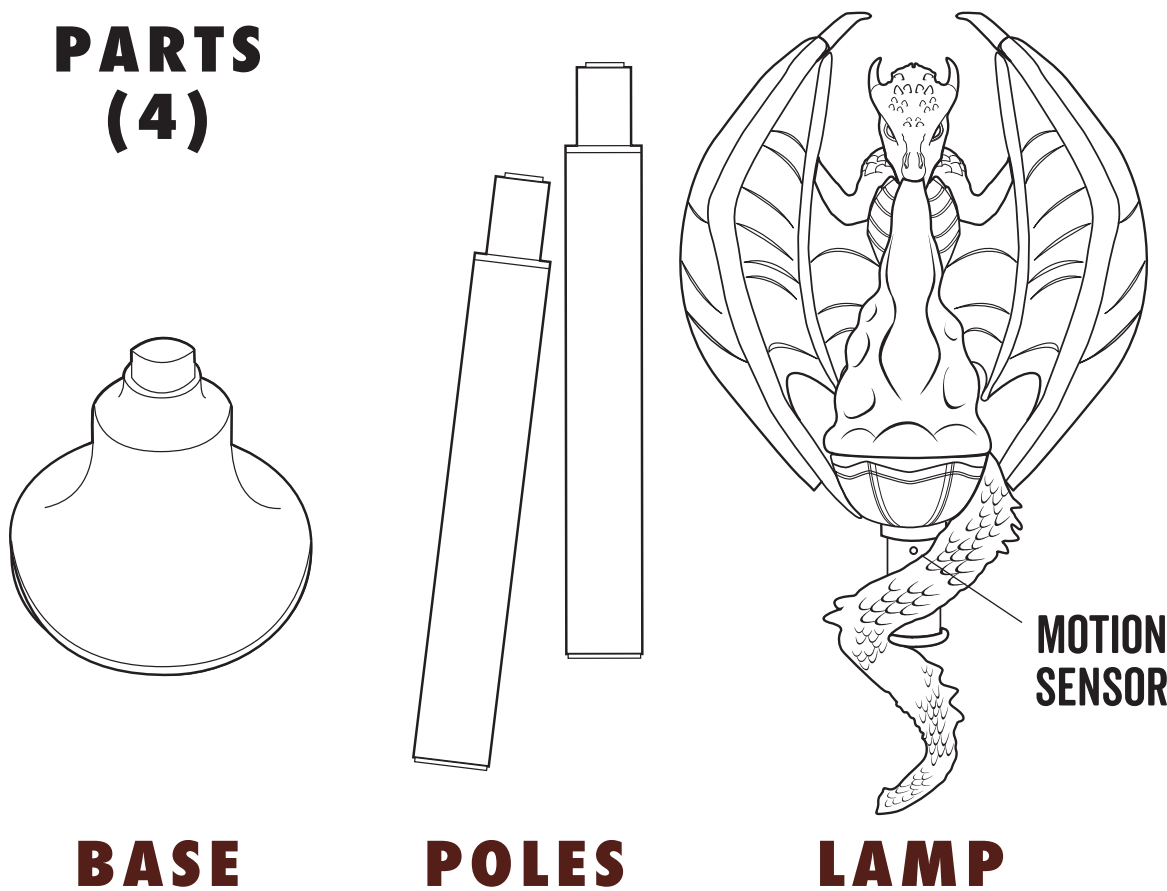


1. USE A SMALL PHILLIPS SCREWDRIVER TO OPEN BATTERY COMPARTMENT LOCATED ON BACK OF LAMP TO ACCESS BATTERY TRAY. CAREFULLY REMOVE BATTERY TRAY AND DO NOT FORCEFULLY REMOVE TRAY AS IT IS CONNECTED TO LAMP WITH TETHERS. USE SCREWDRIVER TO OPEN COVER FOR BATTERY ACCESS. INSERT 4 AA ALKALINE BATTERIES (NOT INCLUDED) INTO THE COMPARTMENT AND REPLACE COVER AND TRAY.

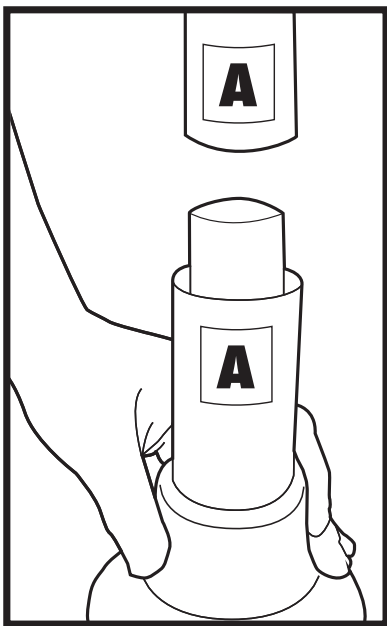

2. INSERT POLE INTO BASE, MATCHING “A” TO “A”. TWIST TO LOCK.

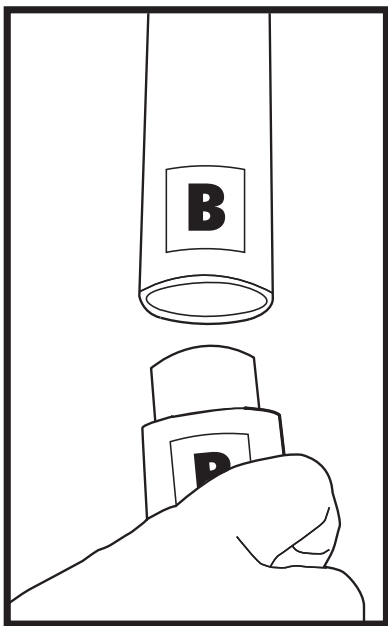

3. INSERT POLE INTO POLE, MATCHING “B” TO “B”. TWIST TO LOCK.

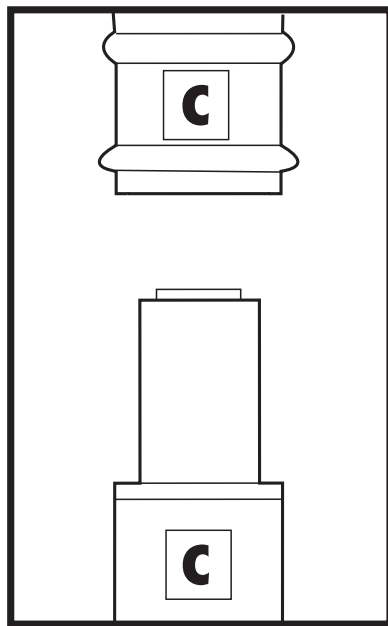

4. INSERT LAMP INTO POLE, MATCHING “C” TO “C”. TWIST TO LOCK.

5. PLACE POWER SWITCH ON BACK OF LAMP TO THE “ON” POSITION TO OPERATE IN SOUND AND MOTION ACTIVATION MODE. MAKE A LOUD SOUND (CLAP) OR MOVE IN FRONT OF THE FLAMING DRAGON LAMP POST™ TO ACTIVATE THE SCARY SEQUENCE!

6. OR PLACE THE POWER SWITCH TO “CONTINUOUS” FOR NON-STOP OPERATION OF ITEM.

NOTE: KEEP POWER SWITCH IN THE “OFF” POSITION WHEN NOT IN USE.

INCLUDES ONE (1) FLAMING DRAGON LAMP POST™ DECORATION.
ASSEMBLY REQUIRED. DISPLAY ON LEVEL SURFACE.

ALL NEW MATERIALS: PLASTIC, VINYL.
SURFACE WASHABLE ONLY.

INDOOR/SHELTERED OUTDOOR USE.

TAKE ITEM INDOORS DURING INCLEMENT WEATHER.

ACTUAL ITEM MAY VARY FROM THE PHOTOGRAPHS
AND/OR ILLUSTRATIONS ON PACKAGE.

ITEM #61167.

FLAMING DRAGON LAMP POST™ IS A TRADEMARK OF TEKKY.
COPYRIGHT © 2024 TEKKY. ALL RIGHTS RESERVED.

TEKKYDESIGN.COM

⚠ WARNING

CHOKING HAZARD - small parts.
This item is not a toy. For decoration only.
This product is intended for use by persons 15
years of age and older. Not intended for use
by children 14 years of age and younger.


TO ACTIVATE WITH FOOTPAD

(NOT INCLUDED—CAN BE PURCHASED ONLINE AT [TEKKYACCESSORIES.COM](https://www.tekkyaccessories.com))

Connect cable from footpad to the jack labeled “FOOTPAD” located on back of LAMP.
Place power switch on LAMP to the “FOOTPAD” position to enable footpad activation.
Step on footpad to activate item. Keep switch in the “OFF” position when not in use.

6V 2A DC
ADAPTER JACK
(ADAPTER
NOT INCLUDED)

3-WAY
POWER SWITCH
ON
OFF / FOOTPAD
CONTINUOUS

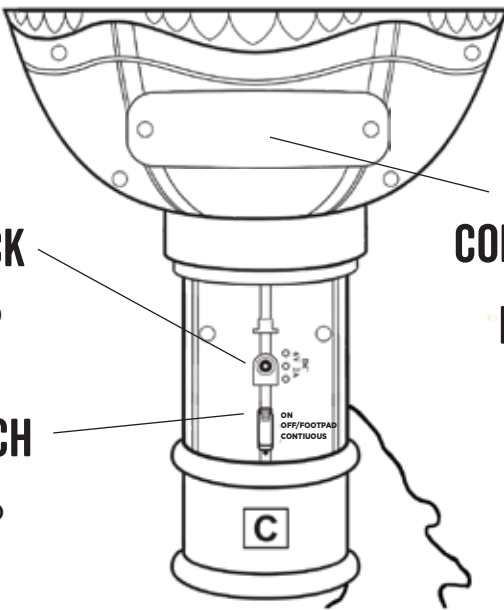


BATTERY
COMPARTMENT

FOOTPAD
JACK

SPEAKER

2-WAY
SOUND SWITCH
NO SOUND
WITH SOUND

SOUND
SENSOR

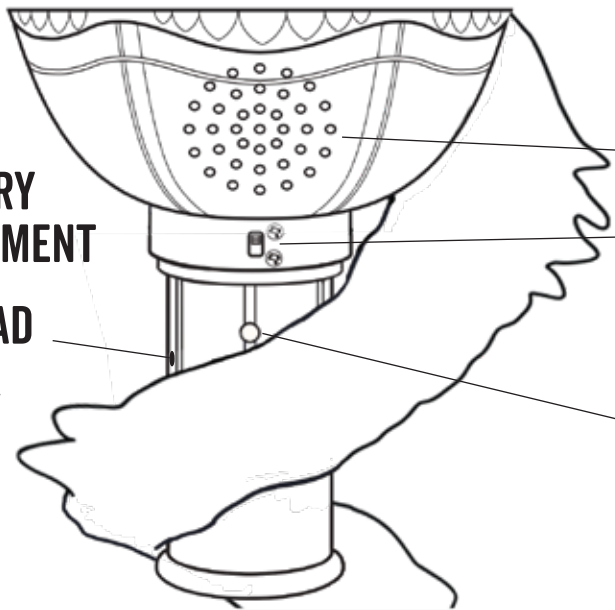

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.



Scan code for
easy setup video

**AGES
15+**

*6.3 FT
(193 CM)

4AA
BATTERIES
REQUIRED
(NOT INCLUDED)

