



6 FEET TALL! SOUND AND MOTION ACTIVATED ANIMATED HALLOWEEN PROP REALISTIC FLAME EFFECT • EERIE LED LIGHTS AND SPOOKY SOUNDS SETTING UP YOUR DRAGON LAMP POST™


PARTS (4)

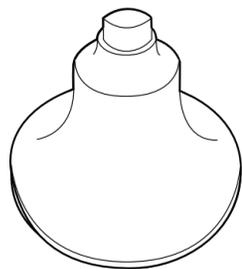

BASE

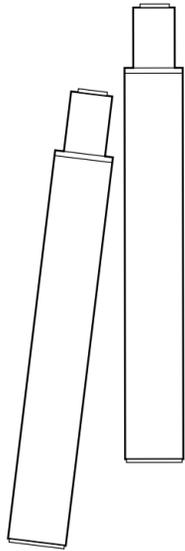


POLES

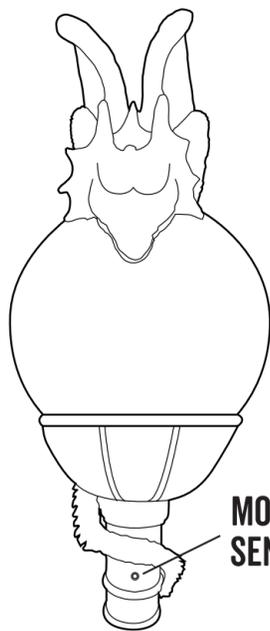


MOTION
SENSOR

LAMP


1. INSERT 4 AA ALKALINE BATTERIES INTO THE COMPARTMENT LOCATED ON BACK OF LAMP. USE A SMALL PHILLIPS SCREWDRIVER TO OPEN BATTERY COMPARTMENT TO ACCESS THE BATTERY TRAY. DO NOT REMOVE BATTERY TRAY, IT IS PERMANENTLY ATTACHED TO ITEM. USE SCREWDRIVER TO OPEN COVER FOR BATTERY ACCESS.

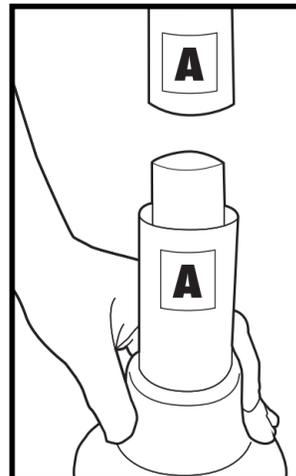

2. INSERT POLE INTO BASE, MATCHING "A" TO "A". TWIST TO LOCK.

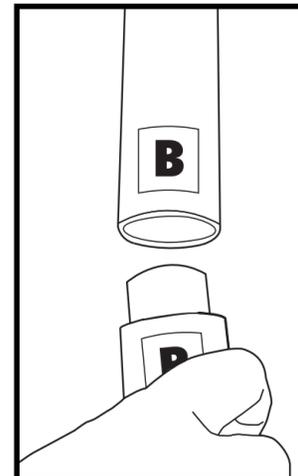

3. INSERT POLE INTO POLE, MATCHING "B" TO "B". TWIST TO LOCK.

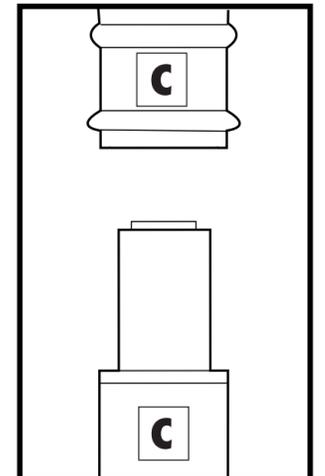

4. INSERT LAMP INTO POLE, MATCHING "C" TO "C". TWIST TO LOCK.

DRAGON LAMP POST™

INCLUDES ONE (1) DRAGON LAMP POST™ DECORATION.
ASSEMBLY REQUIRED. DISPLAY ON LEVEL SURFACE.

ALL NEW MATERIALS: PLASTIC, METAL.
SURFACE WASHABLE ONLY.

INDOOR/SHELTERED OUTDOOR USE.

ACTUAL ITEM MAY VARY FROM THE PHOTOGRAPHS
AND/OR ILLUSTRATIONS ON PACKAGE.

ITEM #59073. DRAGON LAMP POST™ IS A TRADEMARK OF TEKKY.
COPYRIGHT © 2021 TEKKY. ALL RIGHTS RESERVED.

TEKKYDESIGN.COM

5. PLACE POWER SWITCH ON BACK OF LAMP TO THE "ON" POSITION TO OPERATE IN SOUND AND MOTION ACTIVATION MODE. MAKE A LOUD SOUND (CLAP) OR MOVE IN FRONT OF THE DRAGON LAMP POST™ TO ACTIVATE THE SCARY SEQUENCE!

6. OR PLACE THE POWER SWITCH TO "CONTINUOUS" FOR NON-STOP OPERATION OF ITEM.

NOTE: KEEP POWER SWITCH IN THE "OFF" POSITION WHEN NOT IN USE.


TO ACTIVATE WITH FOOTPAD

(NOT INCLUDED—CAN BE PURCHASED ONLINE AT TEKKYACCESSORIES.COM)

Connect cable from footpad to the jack labeled "FOOTPAD" located on back of LAMP. Place power switch on LAMP to the "FOOTPAD" position to enable footpad activation. Step on footpad to activate item. Keep switch in the "OFF" position when not in use.

⚠ WARNING

CHOKING HAZARD - small parts.
This item is not a toy. For decoration only.
This product is intended for use by persons 15
years of age and older. Not intended for use
by children 14 years of age and younger.

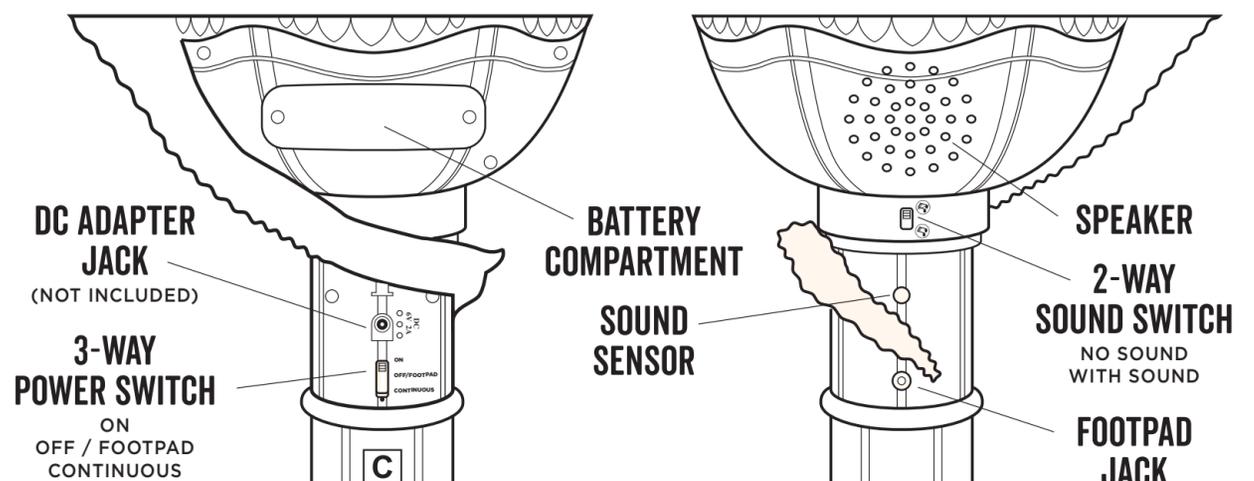

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.



Scan code for
easy setup video

AGES
15+

4AA
BATTERIES
REQUIRED
(NOT INCLUDED)

