



HAUNTED LIVING and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #5745178
MODEL #61089

8.5-FT ANIMATED CIRCUS CLOWN

ATTACH YOUR RECEIPT HERE



Serial Number _____

Purchase Date _____



Thank you for purchasing this HAUNTED LIVING product.

Questions, problems or missing parts?

Before returning, contact us on:

888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday or ascs@lowes.com.

SG24197

TABLE OF CONTENTS

Package Contents..... 3

Safety Information..... 4

Preparation..... 4

Assembly Instructions..... 5

Care and Maintenance..... 10

Troubleshooting..... 10

PACKAGE CONTENTS



PART	DESCRIPTION	QUANTITY
1	Metal Base	1
2	Hand Poles	2
3	Hands with Bowling Pins	2
4	Body Frame & Module with Control Box, Adapter Extender, 5.9V 3A Adapter	1
5	Feet	2
6	Head	1
7	AA Batteries	4
8	Wire Management Clips	2
9	2.5kg Empty Sandbag	1
10	Snap Lock Removal Tool	1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

BATTERY INSTRUCTIONS:

1. Includes (4) AA 1.5-volt batteries. Batteries are not rechargeable.
2. Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed. Keep away from young children.
3. Remove batteries when not in use.
4. Do not mix new and used batteries.
5. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
6. Be mindful to insert batteries with the correct polarity (+/-) as indicated.
7. Remove all exhausted batteries.
8. Rechargeable batteries are only to be charged under adult supervision.
9. Rechargeable batteries are to be removed from the item before being charged.
10. Non-rechargeable batteries are not to be recharged.
11. The supply terminals are not to be short-circuited.
12. Always dispose exhausted batteries properly.
13. DO NOT dispose of batteries in fire, they may leak or explode.

WARNING

• **Warning: Risk of injury to persons. Read and understand instruction manual before use.**

- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation except on the metal base.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

A small crosshead/Phillips screwdriver is required to remove the battery compartment cover on the control box.


Recommended 2 person setup.

Estimated Assembly Time: 5 minutes


ASSEMBLY INSTRUCTIONS

1. Insert and snap lock the HAND POLES into the METAL BASE.

(Match A to A), (Match B to B)

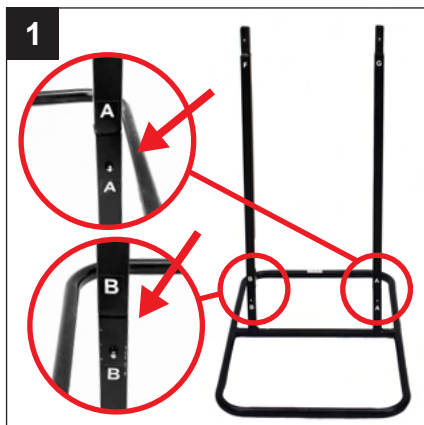

2. Slide the HANDS WITH BOWLING PINS down over the HAND POLES. Position the HANDS WITH BOWLING PINS with the thumbs facing toward each other.

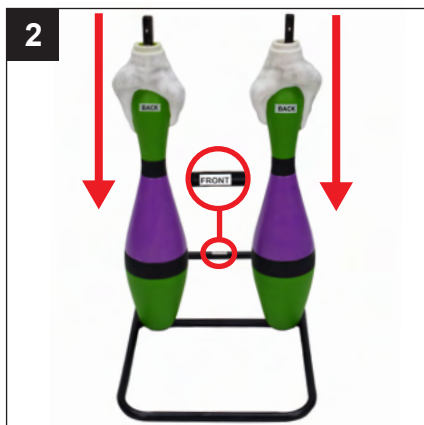

3. Insert and snap lock the BODY FRAME & MODULE together.

(Match E to E)



ASSEMBLY INSTRUCTIONS

4. Insert and snap lock the left shoulder frame located on the BODY FRAME & MODULE together.

(Match C to C)



5. Insert and snap lock the right shoulder frame located on the BODY FRAME & MODULE together.


(Match D to D)

* Recommended 2 people.



6. Insert and snap lock the arm poles located on the BODY FRAME & MODULE into the HAND POLES.

(Match F to F), (Match G to G)

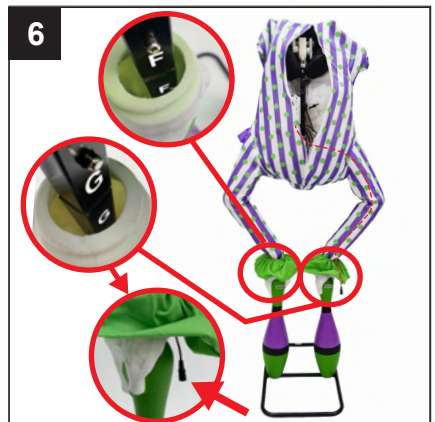


ASSEMBLY INSTRUCTIONS

7. Insert and snap lock the left FOOT into the BODY FRAME & MODULE's left leg pole.

(Match H to H)


Adjust the clothing over the FOOT.

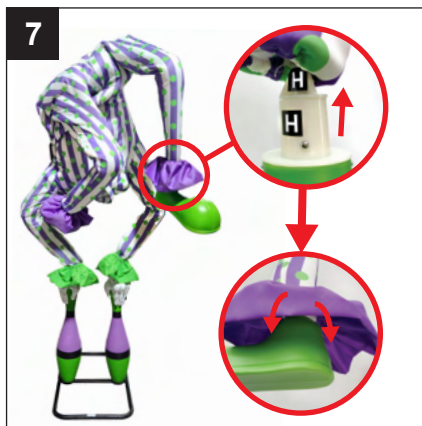

8. Insert and snap lock the right FOOT into the BODY FRAME & MODULE's right leg pole.

(Match I to I)

Adjust the fabric over the FOOT.

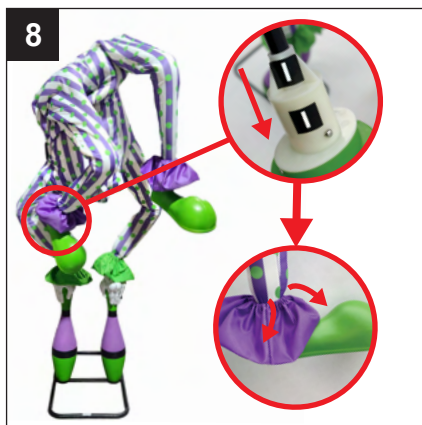

9. Insert and snap lock the leg poles into the waist of the BODY FRAME & MODULE.

(Match J to J), (Match K to K)



ASSEMBLY INSTRUCTIONS

10. Insert and snap lock the HEAD into the shoulders of the BODY FRAME & MODULE.

(Match L to L)




11. Connect the wire located on the HEAD module to the CONTROL BOX.
(Match M to M)

Connect the HUMAN SENSOR wire located on the BODY to the CONTROL BOX.
(Match N to N)

Connect the wire located on the leg module to the CONTROL BOX. (Match O to O)

Secure the wire bundles to the square pole using the WIRE MANAGEMENT CLIPS.

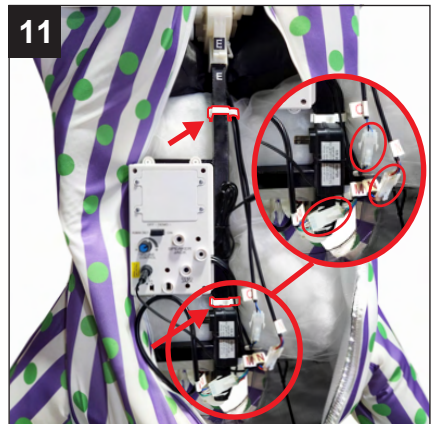

12. Untie the 5.9V 3A ADAPTER from the BODY FRAME.

Connect the 5.9V 3A ADAPTER to the ADAPTER EXTENDER.

Twist the cap located on the 5.9V 3A ADAPTER over the ADAPTER EXTENDER to secure it.




ASSEMBLY INSTRUCTIONS


13. Check that the ADAPTER EXTENDER located on the CONTROL BOX is fully secure by twisting it tight. Do not over tighten.

OR

Disconnect the 5.9V 3A ADAPTER from the ADAPTER EXTENDER located on the bottom of the right arm. (Reference: Step 12 photo)
Insert 4 AA batteries (included) into the battery compartment located on the CONTROL BOX.

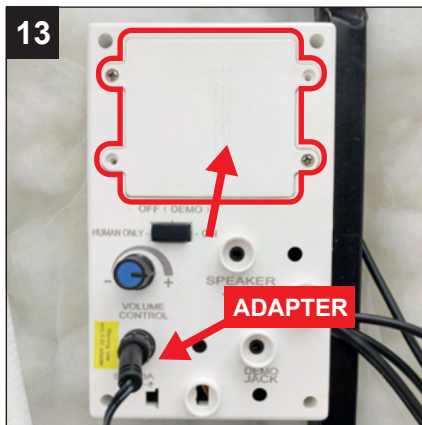

14. Zip the back opening of the BODY FRAME & MODULE closed.

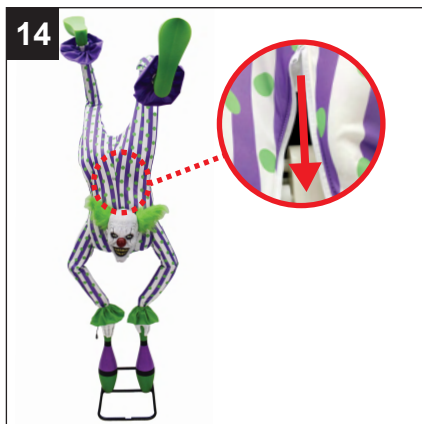


15. Position the item with the human sensor pointing forward.

Move the switch to the ON position. Make a loud sound (clap) or move in front of the item to activate it.

Turn the switch to the OFF position when not in use.

For additional stability add optional SANDBAG on METAL BASE.

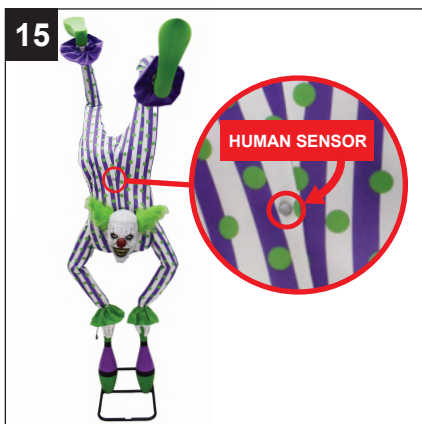

OPTIONAL DEMO AND EXTERNAL SPEAKER SET UP

OPTIONAL DEMO SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
- 2. Place the switch in the DEMO position to enable DEMO activation.
- 3. Step on the footpad or press the external trigger to activate the scary sequence!



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- 2. Use volume knob on external speaker to control volume levels.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- REMOVE BATTERIES WHEN STORING ITEM FOR LONG PERIOD OF TIME.
- DESIGNED FOR SEASONAL OPERATION ONLY.
- NOT INTENDED FOR CONSTANT OR LONG-TERM USE.
- PROPER STORAGE AND USE ARE ESSENTIAL TO THIS ITEM'S LONGEVITY.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	• 5.9V 3A Adapter is not plugged in. • Switch on control box is not in the ON position. • Human sensor on the front of the item may be blocked.	• Check 5.9V 3A Adapter is plugged in and securely inserted into the control box. • Move switch to ON position. • Move any obstructions away from the front of the Human sensor.
You only hear item sound but no item activation.	• Control Box wires to the Body Frame & Module with Control Box are not connected correctly.	• Make sure the control box wires labeled M, N, and O are connected correctly and securely.
Item has no sound while operating.	• Volume knob is turned all the way down.	• Adjust volume knob to desired volume.

FCC REGULATION

FCC STATEMENT

FCC RULES: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.